


G2 JET



(ENG)

User Manual

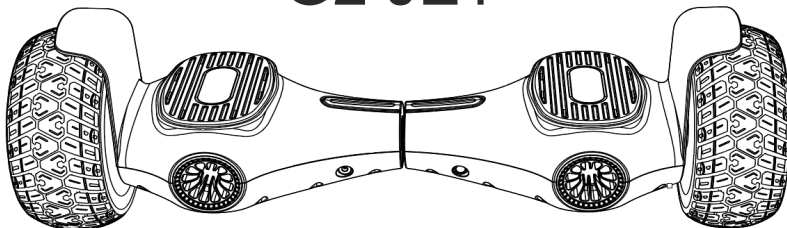

HELMETS SAVE LIVES!

Always wear a properly fitted helmet that complies with CPSC or CE safety standards when you ride your scooter.



Correct Fitting:

Make sure your helmet covers your forehead.



Incorrect Fitting:

Forehead is exposed and vulnerable to serious injury.



Before You Begin-----01



Main Components-----02



Charging Your Batteries-----03



Powering on the Scooter-----04



Indicator Lights -----05



Pairing your Bluetooth Device-----06



Riding Your Motor-----07-10



Safety Alerts-----11



Driving Safety-----12-15



Technical Specifications-----16



Battery Safety-----17-18



Customer Service Support-----19



IMPORTANT! Read Carefully and keep for future reference

Before You Begin


Before learning to ride your scooter, you must read and follow all instructions and warnings in this user manual. It is important that you follow all safety warnings and cautions that appear throughout the user manual and that you use good judgment when you ride your scooter.

The Risk of injury

The scooter is a self-balancing, personal scooter that uses balancing technology. Balancing technology cannot prevent injury if you do not ride the scooter safely. Whenever you ride the scooter, you may take the risk of death or serious injury from loss of control, collisions, and falls. To reduce risk of injury, you must read and follow all instructions and warnings in the user manual.

Disposal and Storage

Disposal of according to local laws.

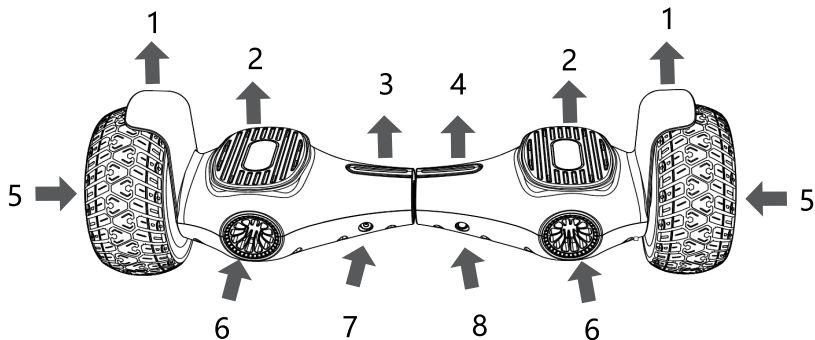

1. Mudguard

2. Silicone foot Pad

3. Status Led Indicator


4. Battery Led Indicator

5. Motor



6. Driving Led Light

7. Charging Button

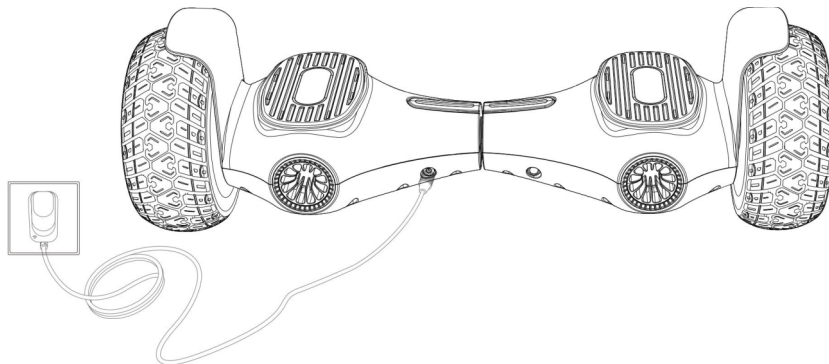8. Power Button



Charger LED indicator Light

- "  " An LED indicator light on your charger will turn red to indicate that the battery is charging.
- "  " The charger's LED indicator light will turn green to indicate that the battery is fully charged.



Do NOT insert the power cord plug if the charge port, power cord or AC power outlet is wet.



Powering On the Scooter

Power on your scooter by pressing the Power button. The Power button is located on the back side of the scooter . The indicator lights will illuminate to indicate the power is ON.

Re-Calibration / Resetting the Scooter

The hoverboard should be calibrated out of the box, but if you find that it is not properly responding to your inputs, you can re-calibrate .

- ❶ First, make sure your hoverboard is turned off and placing the hoverboard on a flat, even surface with both footpads level.
- ❷ Press and hold the power button until the hoverboard begins beeping continuously (approximately 10 seconds).
- ❸ Power off and then turn the power back on. The hoverboard is now calibrated. If the operation is not succeeded at first time ,please try again .

NOTE :


Built in Self-Balance function, it is easy for driving.



When using your Balance E-Scooter, the battery indicator light will let you know how much power remains in your battery.

- When the LED light is green, the battery has enough power to continue riding.
- When the LED light flashes red, the battery needs to be charged as soon as possible. In addition, the scooter will slow down and make a buzzing sound.


NOTE: When planning to go for a ride on your e-scooter, note that the battery life will be shorter when riding in colder temperatures. Plan accordingly.

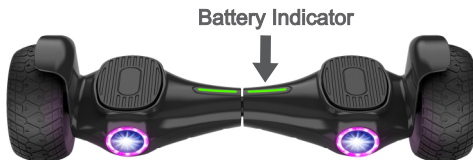



To pair with a Bluetooth® device
follow these steps:

- 1 Make sure both the Bluetooth® function in your device and the scooter are turned on.
- 2 On your device, locate the Bluetooth device list. Select “Hoverboard G2 JET” from the list.

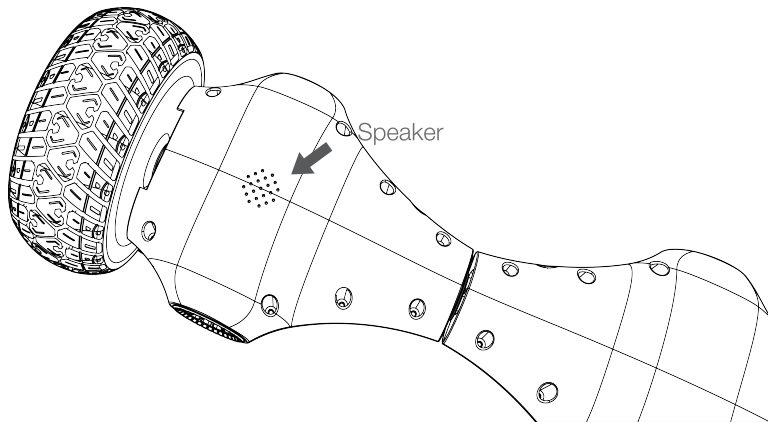




Before riding, make sure your scooter is fully assembled and charged. Inspect your scooter before each use. Do not ride if any part is loose or damaged.

The Scooter is highly maneuverable and allows you to easily navigate around obstacles. However, to prevent the loss of traction, you must always be careful when riding and learn to identify and avoid unsafe surfaces. Slippery, icy, or wet surfaces, loose materials (sand/gravel), steep slopes, and obstacles might affect the scooter performance.

Familiarize yourself with the indicator lights that may be displayed on the scooter.


Step 1. Power ON the Scooter by pressing the power button, Make sure the Battery Status Indicator light is on.

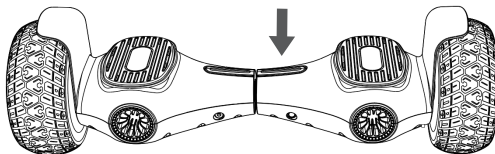



Step 2: Getting on the Scooter

- ① Place one foot on the foot mat
- ② The Balance indicator light will turn ON. Enabling the automatic balancing system.
- ③ Try to keep scooter steady and leveled.
- ④ Place your other foot on the other foot mat

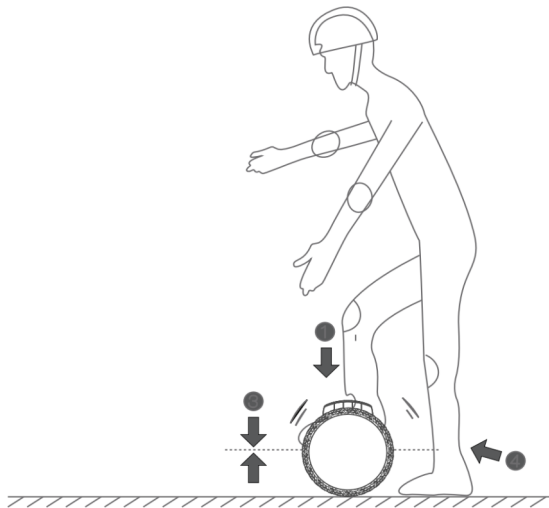



Setp 3: Moving forward and backwards


- 1 Keep scooter still by remaining level when standing on it.
- 2 SLIGHTY lean your body forward or backward to enable the scooter to move forward or backwards respectively.

NOTE, When the scooter is unable to achieve a balanced position, an alarm will sound and trigger the Warning Indicator light. The scooter will return to a balanced position automatically.

During this process, you should not step or ride the scooter.



- Body leaning should be done in small increments. Only small leaning angles are needed to drive the scooter forward or beackwards.
- Leaning forward or backwards too much can affect riding safety.

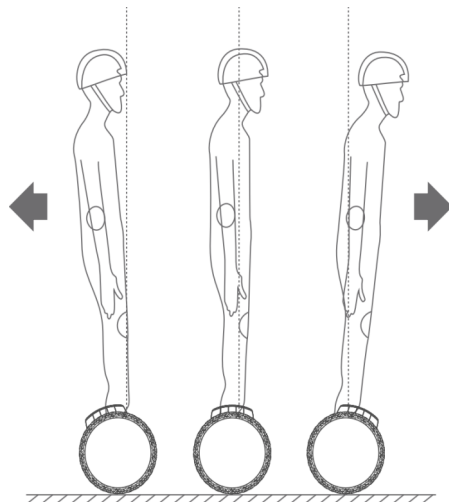




Step 4: Steering the Scooter



Press right foot forward
to turn left

Press left foot forward
to turn right

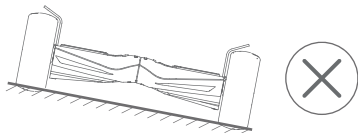

- Do not turn while in high speeds to avoid dangerous situations.
- The scooter balance front to back but not side-to-side. Avoid riding across steep slopes.

Step 5: Getting off the Scooter

Make sure the scooter completely stopped and stable before stepping off. Step off the scooter one foot at a time.



While operating , the scooter can alert users if there are any irregularities in the system. If the scooter detects a fault in any of its redundant systems or the batteries are depleted beyond limit, it automatically slows down the motors. Flashes warning indicator light, emits a warning tone, and disables self balancing mode.

Here are some reasons that will trigger the Warning Indicator Light:

- Low Battery Voltage
- Plugged in and Charging
- Speed Limited reached
- Platform angle is greater than 45 degrees, (System Shutdown)
- Electrical Current Surge



- Risk of Fire, No User Serviceable Parts
- Do not get back on the scooter after until the condition that caused the warning alert has been identified and corrected.
- Never restart and ride your scooter after it has indicated an empty Battery condition or shutdown due to low Battery.
The Scooter may not have enough power to keep you balanced. If you restart and continue riding, you risk failing . Also you risk damaging your batteries, resulting in reduced battery life and capacity.



When riding the scooter you risk serious injury from loss of control, collisions, and falls. It is your responsibility to learn how to safely ride the scooter in order to reduce this risk. To ride safely you must follow all instructions in the user material, including the user manual.

Only use the product in accordance with local regulations

- Always wear proper attire when using the scooter, do not wear loose clothing that can catch in the tires and prevent proper steering.
- Never place anything on the foot mats except your feet.
- Avoid obstacles and surfaces that could result in a loss of balance or traction and cause a fall
- Use caution when riding over any terrain change such as pavement to sand, grass or speed bumps.
- Avoid riding across steep slopes, Maintain both tires in contact with the ground.
- Avoid holes, curbs, steps, and other obstacles.
- Avoid riding over any surface where the bottom of the scooter may impact any object.
- When using in sidewalk, make sure that the front wheel does not drop off the curb,
- Use caution when riding in new environments.
- Make sure you leave enough wheel clearance.
- Be careful and considerate of others while riding.



- Always ride under control at a speed that is safe for you and those around you.
- Always be prepared to stop.
- Respect pedestrians by always yielding the right of way.
- Avoiding startling pedestrians, When approaching from behind, announce yourself and slow down to walking speed when passing , Pass on the left whenever possible. When Approaching a pedestrian from the front, stay to the right and slow down.
- In heavy pedestrian traffic conditions , slow down and proceed at the pace of pedestrian traffic. Pass only if there is ample space to do so safely. Do not weave in and out of pedestrian traffic.
- When riding with other Scooter riders, maintain a safe distance, identify hazards and obstacles, and do not ride side-by-side unless there is plenty of room left for pedestrians.
- Cross roads at designated crosswalks or signaled intersections. Do not jaywalk/ride.
- Only travel on a road when a pedestrian way is not available or when sidewalk use is not allowed . Do not ride your scooter on private property (inside or outside) unless you have obtained permission to do so.
- Learn about and obey applicable local laws and regulations.
- Inspect your scooter before ride it.
- Do not allow any person to use your scooter unless that person has carefully read this Manual.



- Use caution on slopes, Use caution when ascending , descending, or crossing slopes. When riding across any slope. Lean uphill to maintain balance
- Always turn slowly and with caution, Fast turns can lead to loss of control and fails.
- No passengers. The scooter is designed for on rider , Do not rider double or carry any passengers. Do not carry a child in you arms or in a child carrier while riding. Expectant mothers should not ride the scooter.
- Do not exceed the maximum weight limit (rider and all cargo) specified in this Manual. If you exceed the maximum weight limit, you are at greater risk of failing and injury. Also, the rider's weight must not be less then the minimum rider weight limit specified in this manual.
- Do not step off the scooter while moving Always come to a stop before stepping off.
- Be alert. As with any other transportation device, you must be mentally alert to safely ride. Do not attempt to ride if you are ill or if you cannot comply fully with the instructions and warnings in this manual. Do not ride under the influence of alcohol or drugs. Avoid distractions. Do not use a mobile phone, or engage in any other activity that might distract you or interfere with your ability to monitor your surroundings while riding.
- When riding , keep both feet on the foot mats. Be relaxed, Ride in a relaxed position with your knees and elbows slightly bent and head up.



- Do not ride backwards for long periods of time. Instead, turn and ride forward.
- Riding on the road. The scooter is not intended or recommended for primary use on roads. If you must ride on the road, or must cross the road, be extremely careful. Ride as far away from traffic as possible. Check to make sure that riding on the road is allowed by local law.
- Use the Beginner Setting and ride in areas free of obstacles and distractions until you are comfortable using and maneuvering your scooter, Practice at the Beginner level until you can step on, ride forward and backward, turn, stop, and step off without any problems.



Lithium-ion Battery	4.0Ah, 36V, 144Wh
Motor	Dual 500W Motor with Dual Independent Gyros
Distance on full charge	10-12km
Charging Temperature	0°C to 40°C / 32 °F to 104 °F
Charging time	4 to 5 hours
Input	42V $\overline{\text{=}}$ 1A
Max Speed	16 km/h
Tyres	8.5 inch Solid rubber tyres
Max Loading	100 kgs
Max Climbing Limit	15 degree
Temperature	-10°C to 45°C / 14°F to 113°F
Frame Material	Aluminum with Plastic Components
Wheel size	215mm / 8.5 inch
Product Dimensions	720*235*220 mm
Net Weight	11.8 kgs



- Do not use a Battery if the battery pack casing is broken or if the battery emits an unusual odor, smoke, excessive heat or leaks any substance. Avoid contact with any substance seeping from the Batteries.
- Keep out of reach of children and pets. Exposure to battery voltage could result in death or serious injury.
- Unplug or disconnect the scooter from AC power before removing or attaching Batteries or performing any service. Never work on any part of the Scooter when it is plugged into AC power source. You risk serious bodily injury from electric shock as well as damage to the scooter.
- The cells within the batteries contain toxic substances, Do not attempt to open the batteries. Do not insert any object into the batteries or use any device to pry at the battery casing. If you insert an object into any of the battery ports or openings you could suffer electric shock, injury, burns, or cause a fire. Attempting to open the battery casing will damage the casing and could release toxic and harmful substances, and will render the pack unusable.
- Observe and follow all safety information on the warning label found on the batteries
- Failure to charge the batteries could result in permanent damage to them. Left unplugged, the batteries could fully discharge over time, causing permanent damage.
- Using only charging devices approved by Scooter and never attempt to bypass or override their charging protection circuits.

If you will not use the product for 30 days, please charge the battery completely.

Please fully charge the battery after 90 days. Otherwise the battery could discharge itself and be damaged so it will lose its charging capacity. Please note that this kind of damage is not covered by the warranty.



- Do not attempt to wash the scooter with a power washer or high pressure hose. Avoid getting water into the charge port. Always close the charge port cover after charging is completed. Make sure that the Charge port is dry before you plug in the power cord, Failure to follow these instructions could expose you to electric shock, injury, burns, or cause a fire.
- Do not submerge the batteries or platform in water, If you suspect the Batteries or powerbase have been submerged or experienced water intrusion, do not attempt to remove the batteries. Do not plug the Power Cord into the scooter. Failure to follow these instructions could expose you to electric shock, injury, burns, or cause are.
- As with all rechargeable batteries , do not charge near flammable material.
- If you use, charge , or store the scooter batteries outside the limits specified, you may void the limited warranty, damage your batteries, and/or experience reduced range and ineffective battery charging.

Note: Lithium-ion batteries are regulated as “Hazardous Materials”. Transporting Lithium battery by air, or other methods, might be prohibited by policies or law . Please contact the designated agents from the carrier company for more details.

ZIMX
HOVERBOARDS WITH ATTITUDE



Warning!

UKBIGBUY.com
Saving you money every day

Imported by
New Age Group
T/A UKBIGBUY.COM and ZIMX.UK
B16 0HG, UK
Tel : +44 (0)121 454 7589
email : info@ukbigbuy.com
email : info@zimx.uk



To reduce the risk of injury, the user must read the User Manual in detail, before using this product.

For re-charging the battery of the product, use only the accompanied certified charger provided.

- Always wear shoes, a helmet, and appropriate safety gear such as knee and elbow pads, etc. while riding this product.
- Do not operate this product after consuming alcohol or drugs, recreational or otherwise.
- Do not ride without proper training, at high speeds, on uneven terrain, or on steep slopes.
- Do not carry passengers, perform stunts, or turn abruptly.
- The rider should be over 4ft. (121cm) tall and must weigh at least 44lbs and no more than 265lbs to use this product.
- You must comply with local laws and give way to pedestrians.
- Store indoors when not in use.



Model: G2 JET (HY-B01)
Input:100-240V ~50/60HZ 1.5A
Output :42.0V \square 1.0A

Battery Type: Rechargeable Lithium-ion Cells
Capacity: 4.0AH /144Wh
Max Speed: Up to 16 km/h
Weight: 11.8 kg

Only use the product in accordance with local regulations

Assembled in China

Manufacturer: Shenzhen Uni-chic Technology Co., Ltd.

Dormitory Building 101.No.50, Xingqiao Road,
Longxin Community, Baolong Street
Longgang District, Shenzhen,
Guangdong Province, China



UL-2272 CERTIFIED
SELF-BALANCING SCOOTER



ZIMX[®]
HOVERBOARDS
WITH ATTITUDE



www.ukbigbuy.com
www.zimx.uk



@ukbigbuy



@ukbigbuy



@ukbigbuy

UKBIGBUY[®].com
Saving you money every day

If you have any other questions please
contact us on info@ukbigbuy.com or info@zimx.uk