



UKBIGBUY.com

Saving you money every day




[f @ukbigbuy](#) | [t @ukbigbuy](#) | [i @ukbigbuy](#)

www.ukbigbuy.com

Please read the User Manual carefully and understand the assembly and usage before allowing child to ride it.

Please do not discard this manual as it is a permanent part of this product.

ZIMX
SCOOTERS

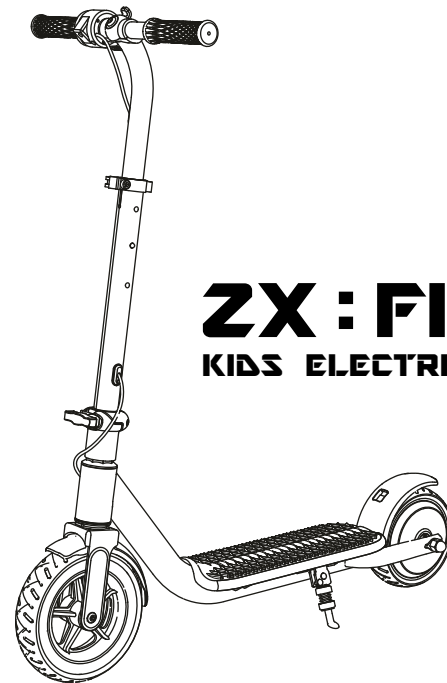


ZX:FLASH
KIDS ELECTRIC SCOOTER

OWNER'S MANUAL

Special design for kids, with new cool and fun electric assist mode, will add motivation to children's growth.

Thank you for purchasing

Thanks for choosing the Electric Scooter (hereinafter referred to as the scooter)! The scooter is especially designed for smooth and safe riding. It combines the power of electricity and the style of a traditional scooter. Enjoy an effortless gliding experience on this cool, ultra-lightweight, and easy to fold scooter. Before you start, make sure the rider meets the age, height and weight requirements below.

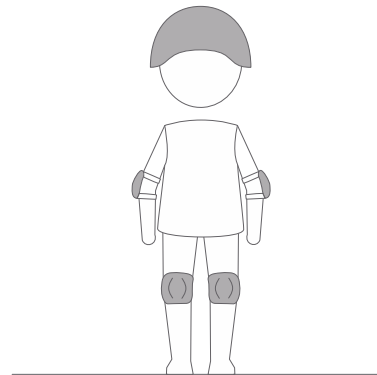

8-14 yrs.
100-160CM | ≤55KG

WARNING

To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than 1 rider.

Contents

1. Riding Safety-----	03
2. Package Contents -----	05
3. Knowing the Electric Scooter-----	06
4. Assembly-----	08
5. Set-Up-----	10
6. How to Charge -----	11
7. How to Ride and Stop -----	12
8. Safety Instructions -----	14
9. Folding and Unfolding -----	18
10. Specifications -----	19
11. Daily Care and Maintenance -----	20
12. Warranty -----	21
13. Customer Service Contact Information -----	21

* It is a sports and recreational vehicle with style.

1. Riding Safety

Please understand that you can reduce the risk by following the instructions and warnings in this manual, but you cannot eliminate all the risks. Please use common sense when riding.

- This electric scooter is a leisure device. But once they're in a public area, they'll be seen as vehicles, subjecting to any risks faced by vehicles. For your safety, please follow instructions in the manual and traffic laws and regulations set forth by government and regulatory agencies.
- At the same time, you should understand that risks cannot be entirely avoided as others may violate traffic regulations and drive incautiously, and you're exposed to road accidents just as when you're walking or biking. The faster the scooter is, the longer it takes to stop. On a smooth surface, the scooter may slip, lose balance, and even result in a fall. Thus it is crucial that you use caution, keep proper speed and distance, especially so when you're unfamiliar with the place.
- Respect pedestrians' Right of Way. Try not to startle them while driving, especially children. When you ride from behind pedestrians, ring your bell to give them a heads-up and slow your scooter to pass from their left (applicable to countries where vehicles drive on the right). When you ride across pedestrians, keep to the right at a low speed. When you drive across pedestrians, keep the lowest speed or getting off the vehicle.
- Closely follow the safety instructions in the manual in the countries that lack relevant laws and regulations regarding electric scooters. Company shall not be liable for any financial losses, physical injuries, accidents, legal disputes and other interest conflicts resulted from actions that violate user instructions.
- Do not lend your scooter to whoever knows not the operations. And when you do lend it to your friends, please take the responsibility to ensure he/she knows the operation and wears the safety gear.
- Check the scooter before every use. When you note loosen parts, low battery alerts, flat tires, excessive wear, strange sounds, malfunctions and other abnormal conditions, stop riding immediately and call for professional support.
- Do not touch moving or spinning wheels. Keep your hair, clothing, or similar articles from coming in contact with the moving parts.

- Never allow your child to touch any vehicle parts with gaps such as the folding mechanism, fender brake, wheels, the brake system, etc. Do not touch the brake or hub motor after riding, so as to avoid burns due to increased temperature.

Who Should Not Ride:


- Anyone under the influence of alcohol, drugs, or intoxicants.
- Anyone who suffers from diseases (especially in the head, heart, back and neck) that put them at risk if they engage in strenuous physical activity.
- Anyone who has a health condition that would interfere with their ability to maintain balance.
- Anyone whose age, height and weight is outside the stated limits.
- Those with compromised mental abilities who cannot understand the risks and proper operation of the vehicle.

WARNING

- This scooter is unsuitable for children under 6 years due to its maximum speed.
- Never allow your child to touch any vehicle parts with gaps such as the folding mechanism, fender brake, wheels, the brake system, etc. Do not touch the brake or hub motor after riding, so as to avoid burns due to increased temperature.
- Do not modify the scooter or change parts by yourself.
- Do not touch moving or spinning wheels. Keep your hair, clothing, or similar articles from coming in contact with the moving parts.


2. Package Contents

Carefully check package contents, if anything is missing or damaged, please contact online customer service for support.

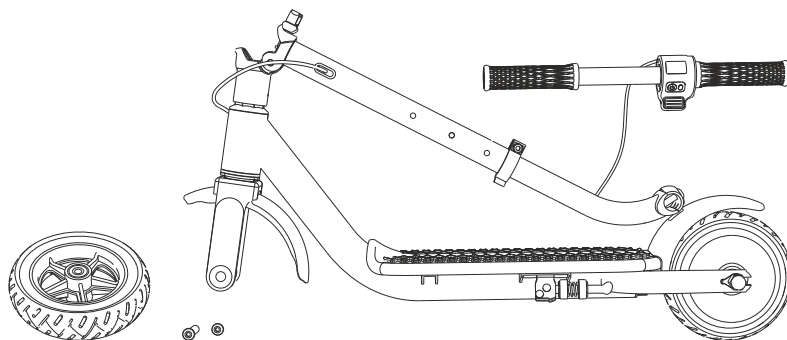

Accessories


Charger *1



Owner's Manual *1




5 mm Allen Wrench *1
6 mm Allen Wrench *1

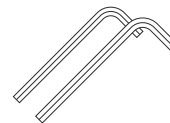


The pictures shown are for illustration purpose only. Actual product may vary.

3. Knowing the Electric Scooter


The product is for recreation only. It is not intended for transportation. In order to master riding skills, the rider needs to practice.

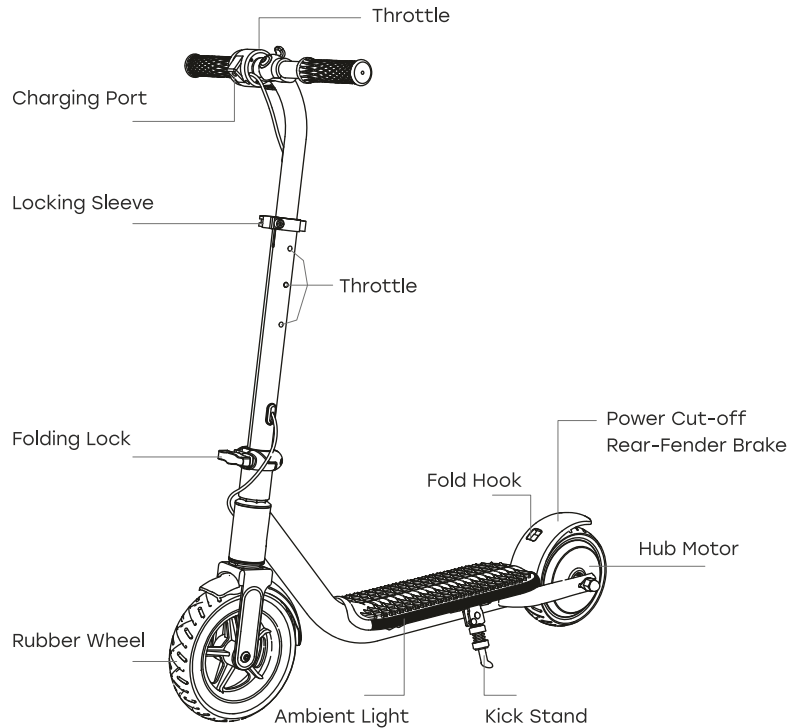


Throttle Instruction

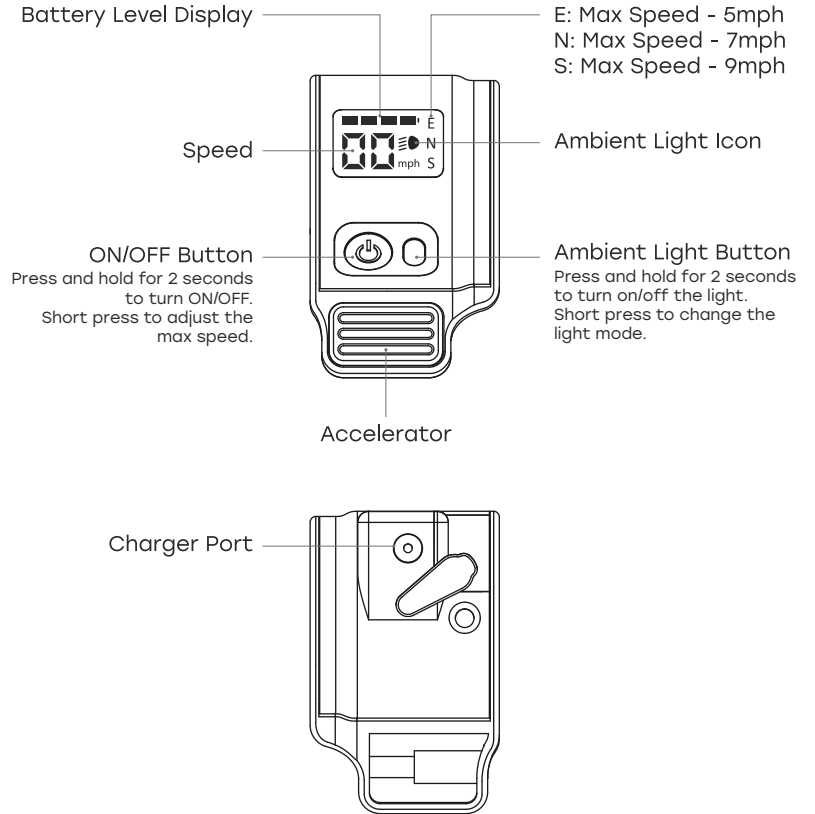

4. Assembly

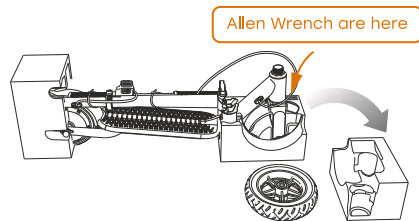


Step 1: Remove the cover of the Polylon, then get the wheel out.

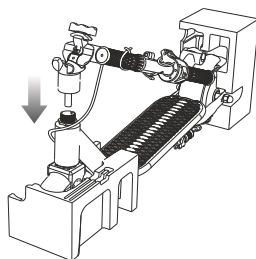


Step 2: Inset the metal frame vertically into the slot.

Warning: Please take care of the cables when pick up the metal frame

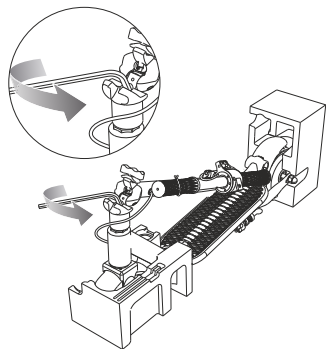


Step 3: Correcting it and then tightening the metal frame by 6mm Allen Wrench.

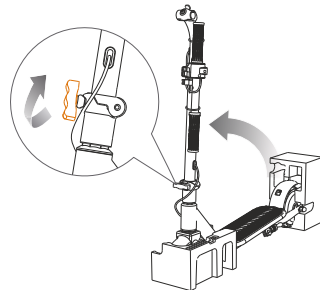


Step 4: Unfold the stem and push it up until you hear a click.


* Confirm that the latching axis on the folding mechanism is secured.

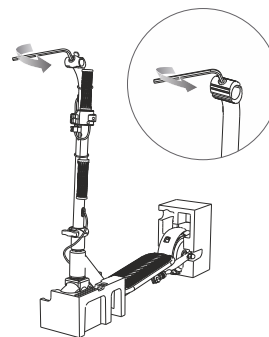

Step 5: Using the 5 mm Allen Wrench loosen the handlebar clamp.

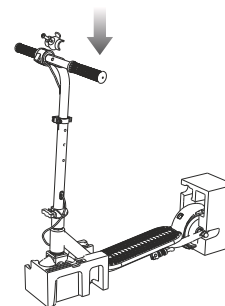


Step 6: Insert the handlebar with the throttle facing the rider.

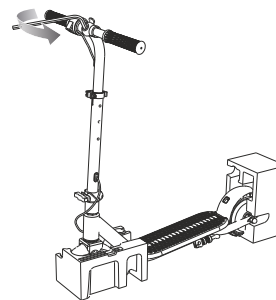

Step 7: Using the 5mm Allen Wrench tighten the handlebar clamp.


* Remove all the polylon.

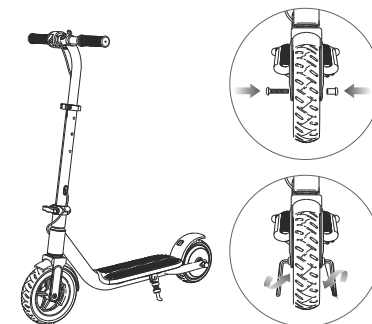


Step 8: Put the tire to the right place, tightening the screw. Use the Allen Wrench to tightening the screw.

5. Set-UP

This scooter is designed for riding on flat, dry paved surfaces. Ride in an open outdoor space. Make sure there are no pedestrians, skateboards, bikes, scooters and other riders in your surroundings.

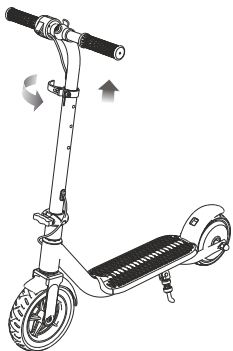


To adjust the height of the handlebars, open the quick-release lever and slide the T-bar to the desired position and resecure the quick-release lever to lock into place.

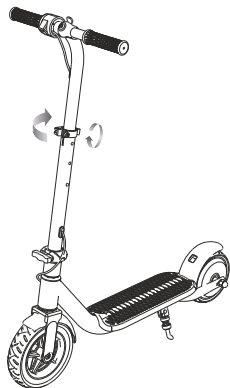

The tension of the quick-release lever can be adjusted by manually tightening or loosening the Allen bolt. Be careful not to overtighten. You should always be able to open and close the quick-release lever by hand and the T-bar should slide freely when the quick-release is open.

6. How to Charge

Only use the charger specified by the manufacturer. Only use the battery supplied by the manufacturer.

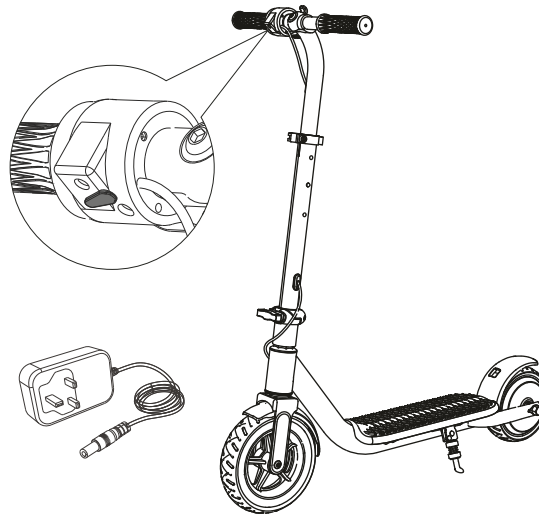


Plug the charger plug into wall outlet, the light on the charger should be green.


The light on the charger should turn red during charging.

When the charging is completed the light will turn green again.


The battery will be fully charged after 5 hours.

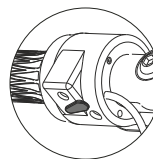

1. Lift the rubber plug.

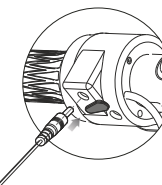


2. Plug the charger into the charging port

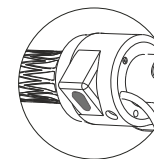

3. When charging is completed, put back the rubber plug.


7. How to Ride and Stop

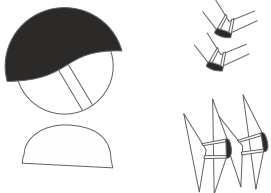

Always wear proper protective equipment, such as an approved safety helmet (with chin strap securely buckled), elbow pads, and kneepads.

A helmet may be legally required by local law or regulation in your area. A long-sleeved shirt, and long pants are recommended.


Always wear shoes and keep shoelaces tied and out of the way of the wheels and motor. Never ride barefooted or in sandals.

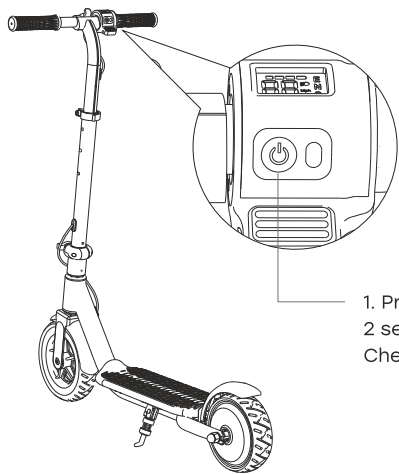

1. Press the power button and hold for 2 seconds to turn on the scooter. Check the power indicator.




2. Step on the deck with one foot, and slowly kick off the other on the ground.

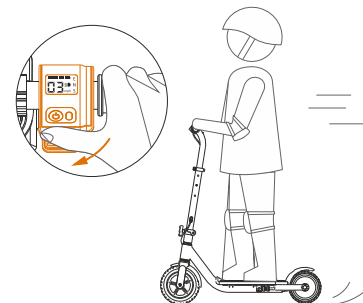


3. When the scooter starts to coast, put both feet on the deck and push down the accelerator.

NOTE: Do not push down the accelerator before the scooter reach the speed 3 mph, the scooter must be traveling at least 3 mph before motor will engage.

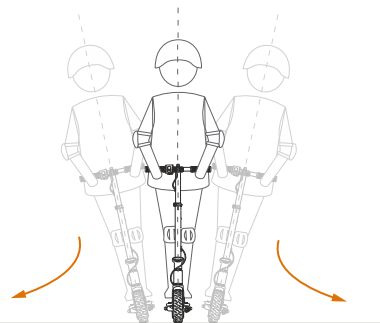

4. Tilt your body to the steering direction as you turn, and slowly turn the handlebar.

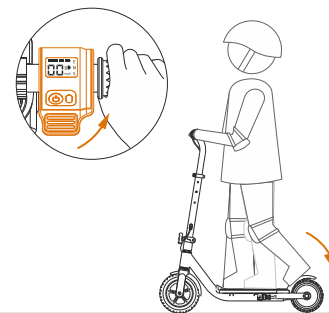


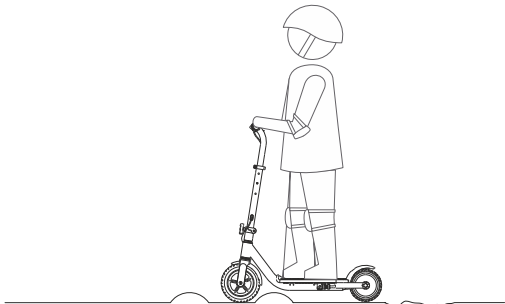
5. For controlled stops, release the throttle and apply the brake by putting pressure on the rear-fender brake.


8. Safety Instructions


Watch out for safety risks.




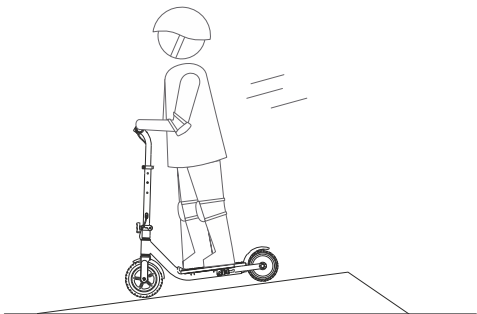
 Do not ride in the rain




 Keep your speed between 3.1-6.2 mph when you ride through speed bumps, elevator door sills, bumpy roads or other uneven surfaces. Slightly bend your knee to better adjust mentioned surfaces

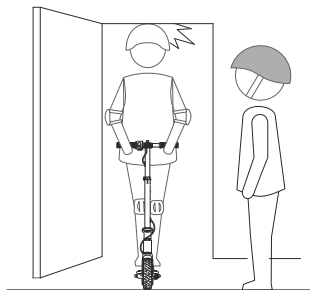


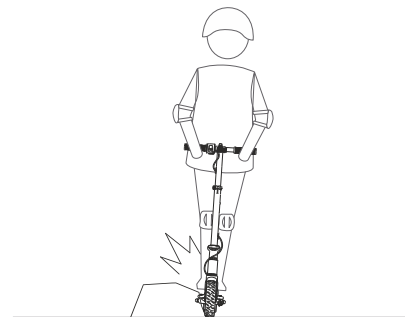
 Look out for doors, elevators and other overhead obstacles




 Do not accelerate when you go downhill

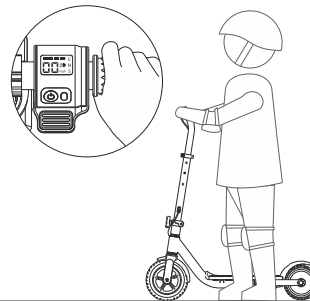


 Do not press the accelerator when you're walking alongside the scooter



 Always steer clear of obstacles

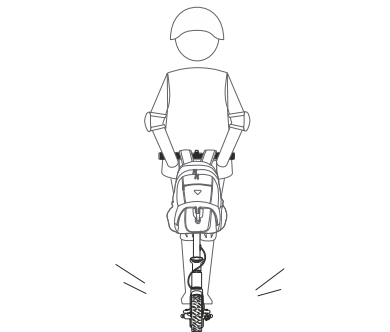


 Do not hang bags or other heavy stuff on the handlebar




 Keep both feet on the deck all time


Do not try following dangerous actions

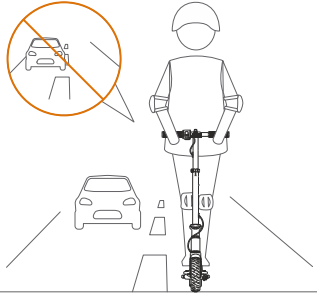


❌ Do not ride in traffic lanes or residential areas where vehicles and pedestrians are both allowed

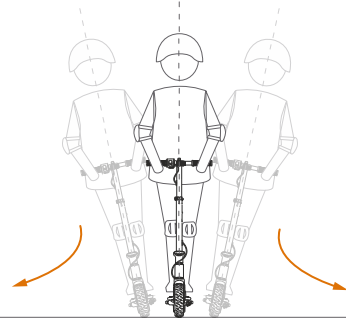

❌ Do not turn the handlebar violently during high-speed riding

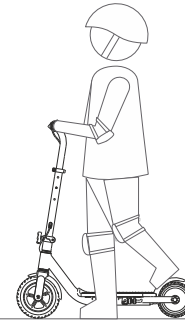


❌ Do not keep your feet on the rear fender brake

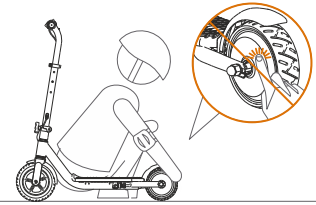


❌ Do not touch the rear fender brake immediately after riding




❌ Do not ride in a ponding that is higher than 0.78 inches

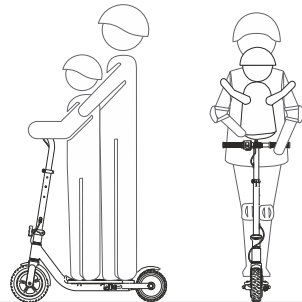

❌ Do not ride with anyone else, including children

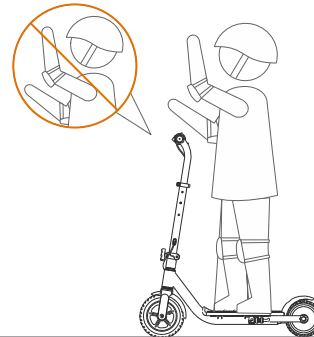


❌ Do not keep your hands away from handlebar

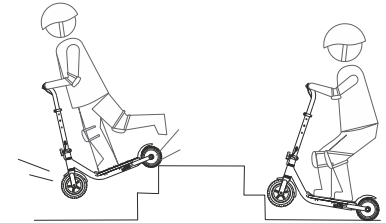


❌ Do not try riding up or down stairs, and jumping over obstacles

9. Folding and Unfolding

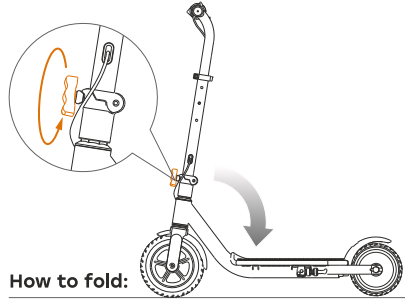

How to fold:


Make sure that the scooter's turned off.
1. Loosen the lock by 3 circles and flip down the folding metal frame tically.

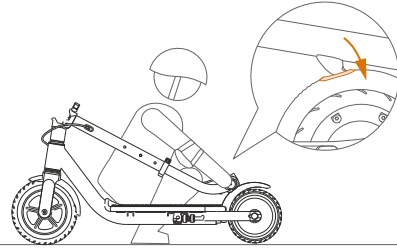


2. Hold the handlebar with both hands and fold the stem down until the folding hook locks into the fender brake.

*Lift the stem to make sure it's securely folded.

Unfold the scooter:

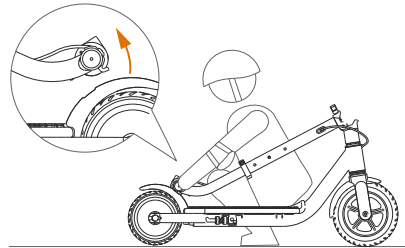

1. Press the fender brake to disengage the hook.

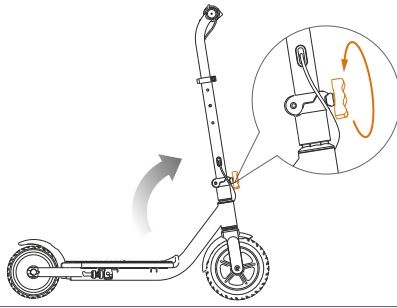

2. Unfold the stem and push it up until you hear a click.

* Confirm that the latching axis on the folding mechanism is secured.

10. Specifications

Size	Folding Size	828 x 386 x 436 mm
	Outline Size	828 x 386 x 985 mm
	Net Weight	7 kg
Loading	Max Load	55 kg
	Minimum Load	15 kg
Rider Limit	Age range	8 to 14 years old
	Height range	100 - 160 cm
SPEC	Lithium-ion battery	25.2V 2.5Ah
	Input	DC 25.2V / 0.5A
	Maximum Speed	14 km / h (Distance various depending on terrain, driving style and load)
	Motor Power	150 w
	Output	DC 29.4 / 0.5a
	Charging time	4-5 h
	Maximum range	8 km
	Maximum climb	20°
	Environment	-10° - 50°

11. Daily Care and Maintenance

Cleaning and storage

If you see stains on the scooter's body, wipe them off with a damp cloth. If the stains won't scrub off, put on some toothpaste, and brush them with a toothbrush, then wipe them off with a damp cloth. If you see scratches on plastic parts, use sandpaper or other abrasive materials to polish them.

Notes: do not clean the scooter with alcohol, gasoline, kerosene or other corrosive and volatile chemical solvents to prevent dire damage. Do not wash the scooter with a high-pressure water spray. During cleaning, make sure that the scooter's turned off, the charging cable is unplugged, and the rubber flap is closed as water leakage may result in electric shock or other major problems.

When the scooter's not in use, keep it indoors where it is dry and cool. Do not put it outdoors for long time. Excessive sunlight, overheating and overcooling accelerate tire aging and compromise the scooter and the battery pack's lifespan.

Battery maintenance

1. Use original battery packs, use of other models or brands may bring about safety issues;
2. Do not touch the contacts. Do not dismantle or puncture the casing. Keep the contacts away from metal objects to prevent short circuit which may result in battery damage or even injuries and deaths;
3. Use original power adapter to avoid potential damage or fire.
4. Mishandling of used batteries may do tremendous harm to the environment. To protect natural environment, please follow local regulations to properly dispose used batteries.
5. After every use, fully charge the battery to prolong its lifespan.

Do not place the battery in an environment where the ambient temperature is higher than 113°F or lower than 14°F (e.g., do not leave the scooter or the battery pack in a car under direct sunlight for an extended time). Do not throw the battery pack into fire as it may lead to battery failure, battery overheating, and even another fire. If the scooter is expected to be left idle for more than 30 days, please fully charge the battery and place it in a dry and cool place. Keep in mind to recharge it every 60 days to protect the battery from potential damage which is beyond limited warranty.

Always charge before exhausting the battery to prolong the battery's lifespan. The battery pack performs better at normal temperature, and poor when it is below 32°F. For instance, when it is below -4°F, the riding range is only half or less at normal state. When the temperature rises, the riding range restores.

Notes: Fully charged Electric Scooter will takes around 5 hours. The built-in intelligent chip will keep a log of its charging and discharging records. The damage caused by prolonged no charge is irreversible and is beyond limited warranty. Once the damage is done, the battery can not be recharged (non-professionals are forbidden to dismantle the battery pack, as it may cause electric shock, short circuit or even major safety accidents).

12. Warranty

ZIMX Limited Warranty

The manufacturer warranties this product to be free of manufacturing defects for a period of 12 months from date of purchase. This Limited Warranty does not cover normal wear and tear, or any damage, failure or loss caused by improper assembly, maintenance, or storage.

This Limited Warranty will be void if the product is ever:

- used in a manner other than for recreation;
- modified in any way;
- rented.

The manufacturer is not liable for incidental or consequential loss or damage due directly or indirectly to the use of this product.

ZIMX does not offer an extended warranty. If you have purchased an extended warranty, it must be honoured by the store / website at which it was purchased from.

For your records, save your original sales receipt with this manual and write your order number and purchase date on it.

13. Customer Service Contact Information

Need Help? Visit our website(s) for product support, customer service information at:

www.ukbigbuy.com
or
www.zimx.uk

UNITED KINGDOM

New Age Group
T/A UKBIGBUY.COM
& ZIMX.UK
B16 OHG, United Kingdom

Tel : +44 (0)121 454 7589
Email : info@ukbigbuy.com
Email : info@zimx.uk